# BELKIN.

# Bluetooth® MUSIC RECEIVER

**User Manual** 

F8Z492 8820tt00264

# TABLE OF CONTENTS

Table of Contents	SECTIONS	1	2	3	4	5	6
1 Introduction		1	4 Troul	bleshootin	g		7
2 Setting Up Your Blue	tooth Music Receive	er 2	5 Safet	y Warning	s		8
3 Pairing Your Bluetoo	th Music Receiver .	3	6 Infor	mation			9
Reconnecting Your Device Changing Connected De Out of Range or Lost Sig	vice	6					9 10

#### INTRODUCTION

#### **Features**

- Play your iPhone, iPod touch, or other device enabled with Bluetooth technology wirelessly through your home stereo
- Control your music directly from vour iPhone or iPod touch
- Connect a device without ever going near the stereo
- Bluetooth connection has a 30 ft. range for virtually unlimited wireless listening in your home

#### What's in the Box







3.5mm - 3.5mm stereo cable



3 5mm - BCA stereo cable




Bluetooth Music Receiver

#### SETTING UP YOUR BLUETOOTH MUSIC RECEIVER

Table of Contents SECTIONS 1 2 3 4 5

- Connect one 3.5mm end of the included audio cable to the headphone jack of the Bluetooth Music Receiver.
- Connect the other end (3.5mm or 2xRCA) to an audio input on your home stereo system.
  Consult your stereo system's manual for more information on how to accomplish this.
- Connect the AC power adapter cable to the Bluetooth Music Receiver's DC input jack, and plug the AC adapter into a wall power outlet.
- The blue LED light will flash once to indicate the unit is powered and is now ready to be paired to your iPhone or iPod touch.

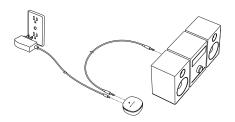

#### PAIRING YOUR BLUETOOTH MUSIC RECEIVER

Table of Contents

SECTIONS

2

3

ď

Go to the Bluetooth
Manager of your
iPhone or iPod
touch by following
these steps:



 a. From your iPhone/ iPod touch home page, tap "Settings".



b. Inside Settings, tap on "General".



c. Inside General, tap on "Bluetooth".

SECTIONS

2

3

4

- 5

- Search Bluetooth devices and click on "Belkin YXX" (e.g., Belkin A58) where:
- a. Y = a letter (A, B, C, etc.)
- b. X = a number (00, 01, 02, etc.)

This is the device ID and is also printed on the bottom of the *Bluetooth* Music Receiver for easy reference.





 Enter "0000" when the player asks for the PIN code. This will allow the iPhone to pair with the *Bluetooth* Music Receiver.  Once paired, the blue LED light on the Bluetooth Music Receiver will flash once. The blue LED light will stay on when a connection is established.

Some devices, such as the iPhone, will connect immediately after pairing so the LED will stay on. Other devices, such as laptops, may ask you if you wish to connect and the LED will go off after pairing until a connection is established.

#### PAIRING YOUR BLUETOOTH MUSIC RECEIVER

Table of Contents

SECTIONS

3

5

6

Although the *Bluetooth* Music Receiver can only play music from one device at a time, it is capable of being paired to up to eight devices. This means that you only have to enter the PIN code one time for each device.

Your Bluetooth Music Receiver is now connected and ready to play music! Just play music on your device as you normally would and the sound will come out of your stereo speakers!

Keep in mind that the *Bluetooth* Music Receiver has a 30-foot range.

## **Reconnecting Your Device**

If you move out of range or turn off the *Bluetooth* feature on your iPhone or iPod touch, the *Bluetooth* Music Receiver will disconnect from your device. To reconnect, simply access the *Bluetooth* Manager on your device and select the appropriate Belkin YXX device listed. You will not be asked to enter the PIN code again.

**SECTIONS** 

1

2

3

.

-5

# **Changing Connected Device**

If you want to switch from one device to another, follow these steps:

- End the existing Bluetooth connection with the connected device. Access the Bluetooth Manager and disable the Bluetooth function of the iPhone or iPod touch.
- The Bluetooth Music Receiver can now be connected to a different iPhone or iPod touch.
- Follow the directions in "Pairing Your Bluetooth Music Receiver" to connect a different device.

## **Out of Range or Lost Signal**

If the music device is out of range (beyond 30 feet) of the *Bluetooth* Music Receiver or if there is something blocking the *Bluetooth* signal, the LED light will turn off to indicate that the *Bluetooth* connection with the music device has been lost. To avoid a lost connection:

- Move the music device back into range (within 30 feet), and/or make sure there's a clear line of sight and that there are no obstructions between the Receiver and the iPhone or iPod touch.
- 2. Within 15 seconds, the connection will automatically be reestablished and the blue LED light will turn on.
- If the connection is lost for more than 15 seconds, the connection will need to be reestablished. Follow the directions in "Reconnecting Your Device".

#### TROUBLESHOOTING

Table of Contents

**SECTIONS** 

4

2

7

3

5

You can quickly solve most problems with your *Bluetooth* Music Receiver by following the advice in this section.

My music is not coming out of the stereo speakers.

#### Solutions:

- · Make sure the Bluetooth Music Receiver is powered.
- Make sure an audio cable is correctly and firmly connected to the Bluetooth Music Receiver.
- Make sure one of the two supplied audio cables is correctly and firmly connected to the Receiver and the stereo.

- · Make sure the Receiver is powered.
- Make sure the stereo volume is set to a comfortable listening level.
- Make sure you are within range of the Receiver, and that your iPhone or iPod touch is connected via Bluetooth technology with the Receiver.

Bluetooth® Music Receiver

#### SAFETY WARNINGS

Table of Contents

**SECTIONS** 

4

2

3

5

Your *Bluetooth* Music Receiver requires full concentration and both hands to install.

Do not use this apparatus near water (for example, a bath tub, wash bowl, kitchen sink, laundry tub, wet basement, swimming pool, or other areas located near water).

Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning.

Do not install near any heat sources such as stoves or other apparatus (including amplifiers) that produce heat.

Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles, and the point where they exit the apparatus.

Only use attachments/accessories specified by the manufacturer.

Unplug this apparatus when unused for long periods of time.

Belkin does not assume any responsibility for personal injury or property damage incurred due to interaction with the *Bluetooth* Music Receiver, iPhone, or iPod.

#### INFORMATION

Table of Contents SECTIONS 1 2 3 4 5

#### **FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Belkin International, Inc., is not responsible for any interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.

**SECTIONS** 

1

2

# Belkin International, Inc., Limited 1-Year Product Warranty

#### What this warranty covers.

Belkin International, Inc. ("Belkin") warrants to the original purchaser of this Belkin product that the product shall be free of defects in design, assembly, material, or workmanship.

#### What the period of coverage is.

Belkin warrants the Belkin product for one year.

# What will we do to correct problems?

Product Warranty.

Belkin will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). Belkin reserves the right to discontinue any of its products without notice, and disclaims any limited warranty to repair or replace any such discontinued products. In the event that Belkin is unable to repair or replace the product (for example, because it has been discontinued), Belkin will offer either a refund or a credit toward the purchase of another product from Belkin.com in an amount equal to the purchase price of the product as evidenced on the rolinal purchase receit as discounted by its natural use.

#### What is not covered by this warranty?

All above warranties are null and void if the Belkin product is not provided to Belkin for inspection upon Belkin's request at the sole expense of the purchaser, or if Belkin determines that the Belkin product has been improperly installed, altered in any way, or tampered with. The Belkin Product Warranty does not protect against acts of God such as flood, lightning, earthquake, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system equipment modification or alteration.

#### How to get service.

To get service for your Belkin product you must take the following steps:

- Contact Belkin International, Inc., at 501 W. Walnut St., Compton, CA 90220, Attn: Customer Service, or call (800)-223-5546, within 15 days of the Occurrence. Be prepared to provide the following information:
  - a. The part number of the Belkin product.
  - b. Where you purchased the product.
  - c. When you purchased the product.
  - d. Copy of original receipt.

SECTIONS

1

2

5

 Your Belkin Customer Service Representative will then instruct you on how to forward your receipt and Belkin product and how to proceed with your claim.

Belkin reserves the right to review the damaged Belkin product. All costs of shipping the Belkin product to Belkin for inspection shall be borne solely by the purchaser. If Belkin determines, in its sole discretion, that it is impractical to ship the damaged equipment to Belkin, Belkin may designate, in its sole discretion, an equipment repair facility to inspect and estimate the cost to repair such equipment. The cost, if any, of shipping the equipment to and from such repair facility and of such estimate shall be borne solely by the purchaser. Damaged equipment must remain available for inspection until the claim is finalized. Whenever claims are settled, Belkin reserves the right to be subrogated under any existing insurance policies the purchaser may have.

How state law relates to the warranty. THIS WARRANTY CONTAINS THE SOLE WARRANTY OF BELKIN. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR, EXCEPT AS REQUIRED BY LAW, IMPLIED, INCLUDING

OR, EXCEPT AS REQUIRED BY LAW, IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF GUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL BELKIN BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR MULTIPLE DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY BELKIN PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state. Some states do not allow the exclusion or limitation of incidental, consequential, or other damages, so the above limitations may not apply to you.

## belkin com

Belkin Tech Support US: 800-223-5546, ext 2263 310-898-1100, ext 2263 UK: 08456077787 Australia: 1800 235546 New Zealand: 0800 235546 Sing Zealand: 0800 235546 Belkin International, Inc-501 West Walnut Street Los Angeles, CA 90220, USA 310-898-1100 310-898-1111 fax

Belkin Ltd. Express Business Park, Shipton Way Rushden, NN10 6GL, United Kingdom +44 (0) 1933 35 2000 +44 (0) 1933 31 2000 fax Boeing Avenue 333 1119 PH Schiphol-Rijk, The Netherlands +31 (0) 20 654 7300 +31 (0) 20 654 7349 fax Belkin Ltd. 4 Pioneer Avenue

Belkin B.V.

Belkin Ltd-4 Pioneer Avenue Tuggerah Business Park Tuggerah, NSW 2259, Australia +61 (0) 2 4350 4600 +61 (0) 2 4350 4700 fax

© 2009 Belkin International, Inc. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. IPod, IPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. The *Bluetooth* name and the *Bluetooth* trademarks are owned by *Bluetooth* SIG, Inc., and are used by Belkin International, Inc., under license.